


Instructions for the assembly of furniture

Bed with lifting mechanism



*Model of side-bar is indicated on the product label

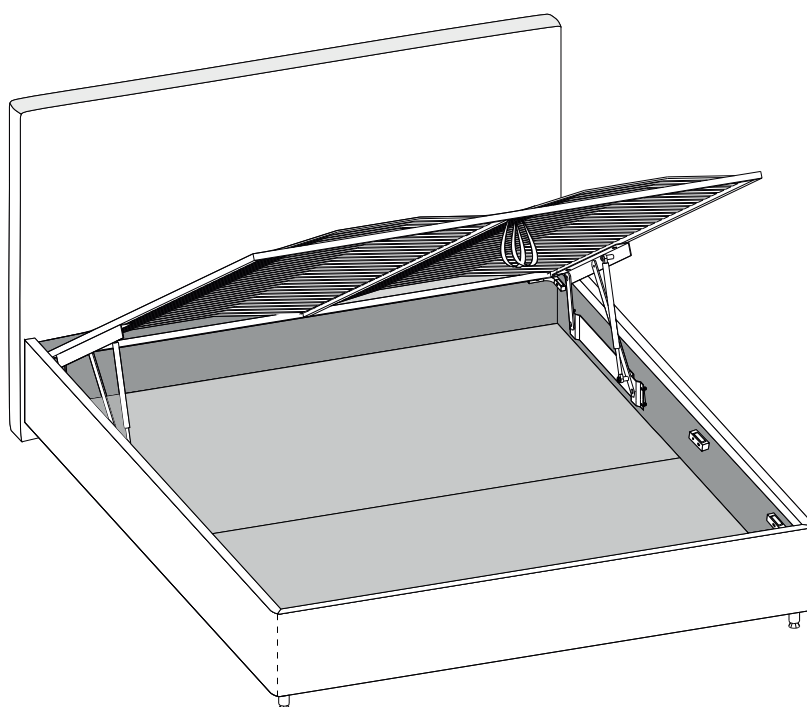

Manufacturer: «Litwood» LLC

Configuration

Packing	Part	Code	Description	Quantity
Package №1		K01	Back	1
		K05	Linen drawer bottom (*may have a separate packaging)	2
		K09	side-bar cover (*may have a separate cover)	1
			side-bar cover (*may have a separate cover)	1
Package №2		K02	Side-bar (side)	2
		K03	Side-bar at the foot	1
			Instructions for assembly	1
			Fabric sample (*or sewn into the side-bar cover see paragraph 37)	1
Package №2 Package with fittings		Legs the modification of the legs depends on the model of the bed, presented as a sample in the cabin or on site (see legs packing list)		1 set
		K06	Handle in the lifting mechanism	2
		KF81	Felt footplate for furniture 20*20	12
Package №3 Bed base		R01	Bed base	1
		R02	Bed connection element (longitudinal)	2
		R03	Bed connection strip	1

Packing	Part	Code	Description	Quantity
Package №3 Package with fittings №1 Completion package depends on modification lifting mechanism (see data sheet base)		RF10	Lifting mechanisms left and right	1 set
		RF17	Gas pressure shock absorber (hinge)	2
		RF14	Mattress holder (*has different configurations)	2
		RF31		2
		RF01	Bolt head M8x45	4
		RF04	Screw M6x20	8
		RF06	Nut M8	4
		RF08	Washer M8	4
Package №3 Package with fittings №2		R04	Detail for connecting corners	4
		R05	Shelf	4
		RF09	Rubber footplate for furniture	12
		RF02	Screw M8x50	36
		RF03	Screw M8x20	4

Legs packing list



The modification of the legs depends on the model of the bed, presented as a sample in the cabin or on site

Packing	Part	Code	Description	Quantity
Leg configuration option №1		KF16	Bed leg Support leg chrome Boyarde-100	2
		KF29	Allen key	1
Leg configuration option №2		KF54	Bed leg №1156 chrome h-150 (sp.8mm)	2
		KF144	Nut M8 DIN 985	2
Leg configuration option №3		KF31	Leg of the wooden h-97 corner	2
		KF144	Nut M8 DIN 985	2
		KF81	Felt footplate for furniture 20*20	4
Leg configuration option №4		KF41	Furniture support decorative h-130 chrome	2
		KF43	Screw M8x20 DIN 967	2
		KF42	Washer M8 DIN 9021	2
		KF39	Nut M8 DIN 934	2
		KF81	Felt footplate for furniture 20*20	2
Leg configuration option №5		KF45	Leg h-60 venge M10	2
		KF46	Decorative nut	2
		KF47	Felt footplate for furniture D40	2

*Type of configuration is reflected on the label package with fittings

Packing	Part	Code	Description	Quantity
Leg configuration option №6		KF55	Bed leg 178 h-50 chrome	2
		KF144	Nut M8 DIN 985	2
Leg configuration option №7		KF69	Bed legs h-120	2
		KF37	Decorative nut	2
Leg configuration option №8		KF77	Bed leg h-100 chrome	2
		KF144	Nut M8 DIN 985	2
Leg configuration option №9		KF140	Cone furniture support 60*60*195 pin M8	2
		KF144	Nut M8 DIN 985	2
		KF81	Felt footplate for furniture 20*20	2
Leg configuration option №10		KF130	Cone furniture support 60*45*120 pin M8	2
		KF144	Nut M8 DIN 985	2
		KF81	Felt footplate for furniture 20*20	2





Instructions for the assembly of furniture. Bed with lifting mechanism. Version No. 17 of 21.07.2023

For side-bar type: 010,010-R,010-E, 030-D, 050, 050-D, 050-P, 070, 080, 090, 090 Grand H, 090 Grand K, 090-G, 090-G Grand K, 090-K, 090-L, 090-M Grand, 090-C, 250


Before the assembly:

1. Check the appearance and integrity of the parts in the packaging! Claims for damage can only be accepted for products WITHOUT traces of assembly. Keep the packaging and instructions until the assembly is completed!
2. In case of a shortage of breakdown, circle the number of the corresponding part and inform the store for its replacement
3. Check the number parts of accessories on the list. The manufacturer reserves the right to make constructive changes in the product, replace fittings and hardware with similar ones that do not deteriorate the appearance and do not affect the functional properties of the product.
4. Observe the assembly procedure given in these instructions! Failure to comply with the assembly and operating instructions will invalidate the manufacturer's warranty.
5. To install a sofa/chair-bed/bed, choose a flat area of the floor! In case of curvature of the floor, deviations in the operation of the transformation mechanism of the sofa / armchair-bed, distortions of the shape of the product are possible. It is undesirable to have a carpet, as this makes it difficult to transform.
6. Carry out the assembly of the sofa/chair-bed/bed, in pairs. Move all parts gently, without jerking, place them in a stable position, avoid dropping and bumping them!
7. Move furniture and its parts only by lifting them slightly. This will prevent deformation and breakage.


To assemble you will need:

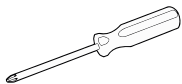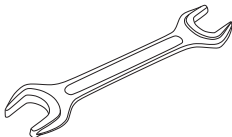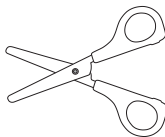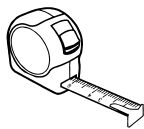			
Phillips screwdriver	Open-end wrench №13	Scissors	Tape measure


1)

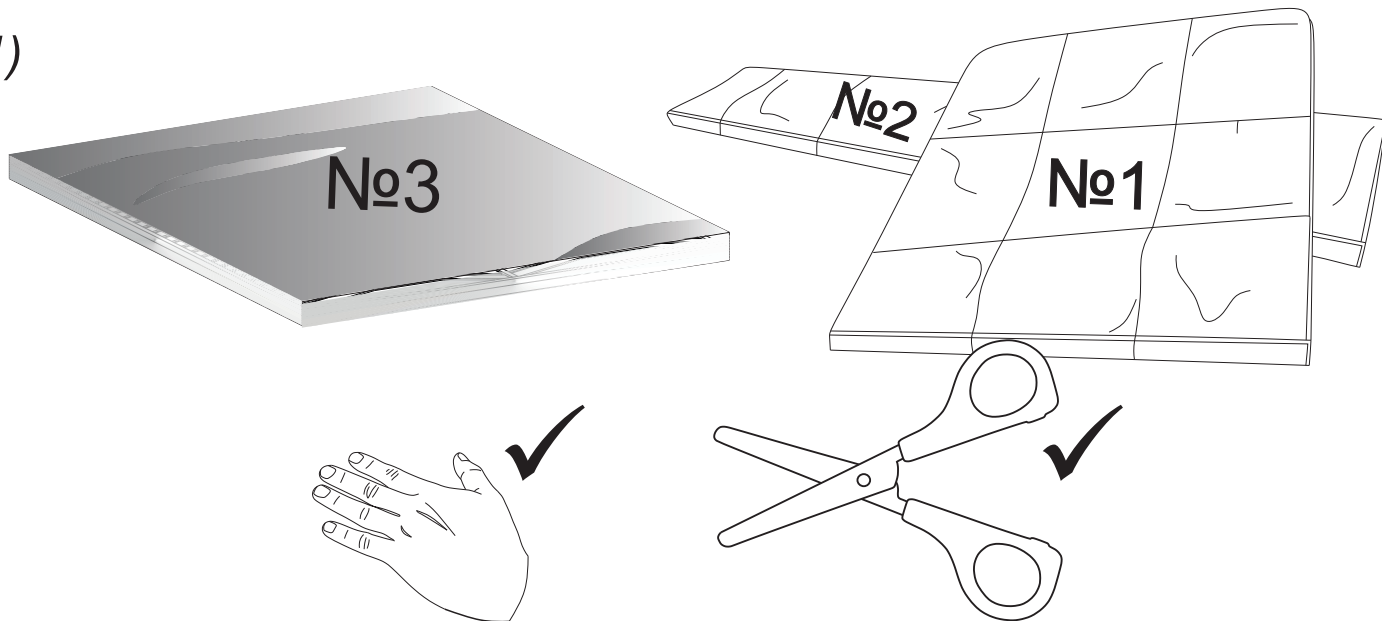


2)

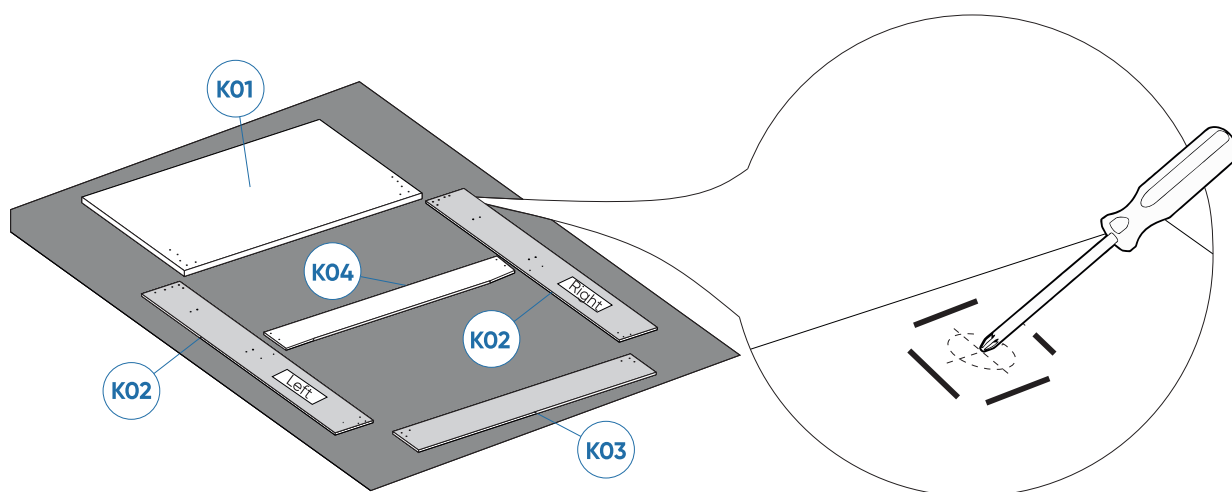

3)

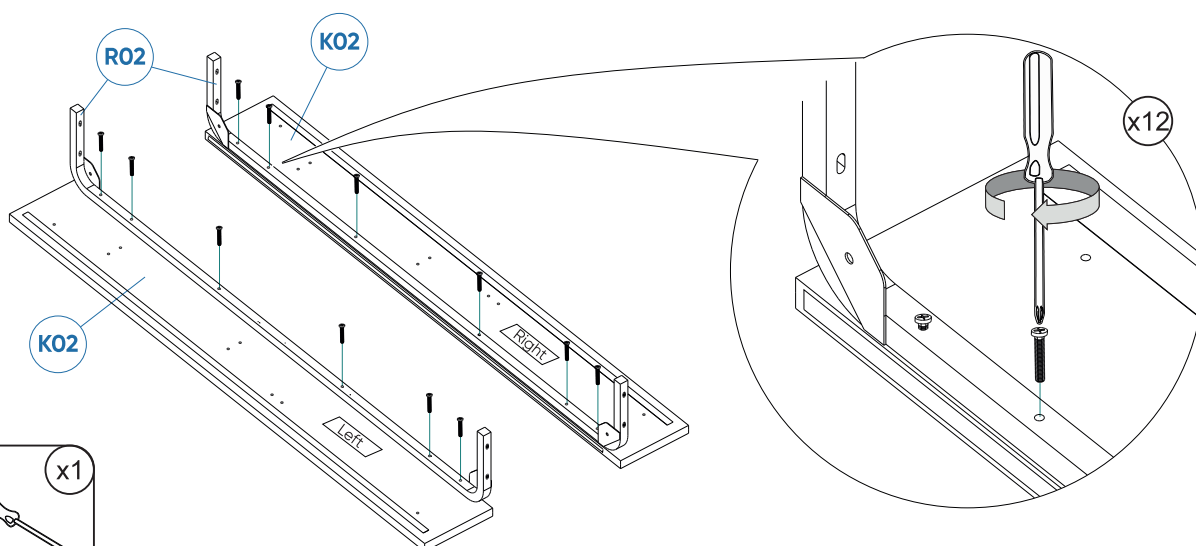


4)

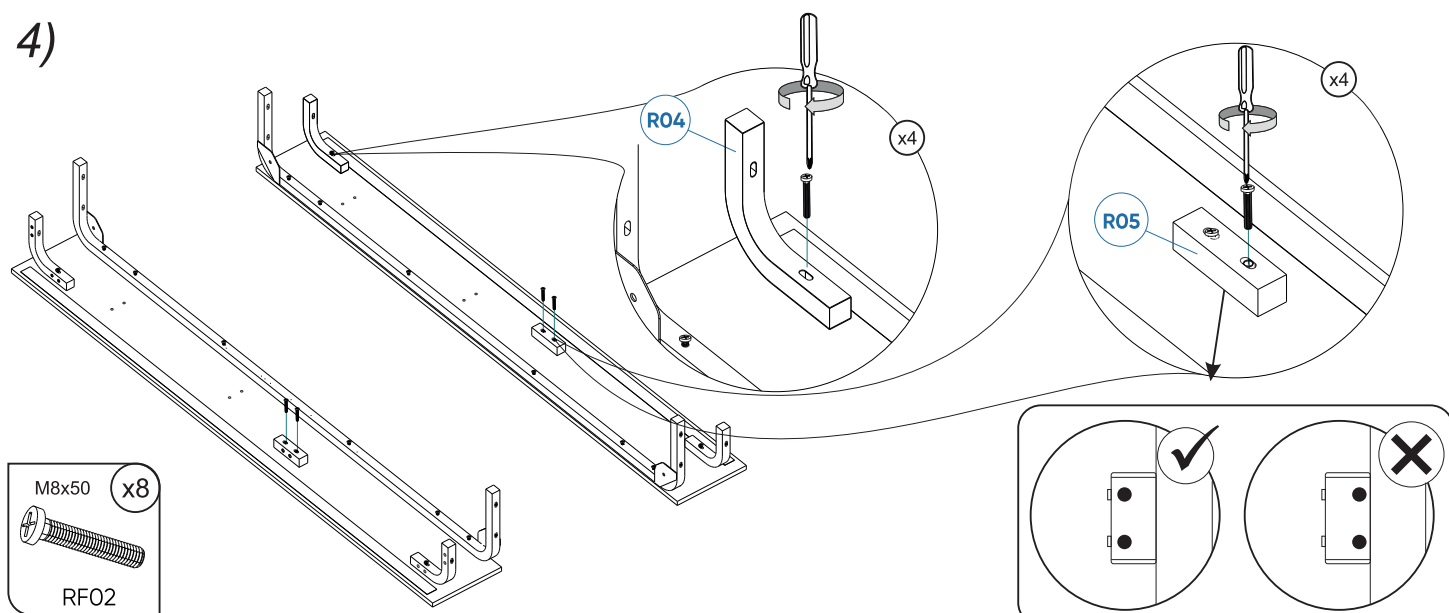


5)

Leg configuration option N°1 (Chrome-Boyard)

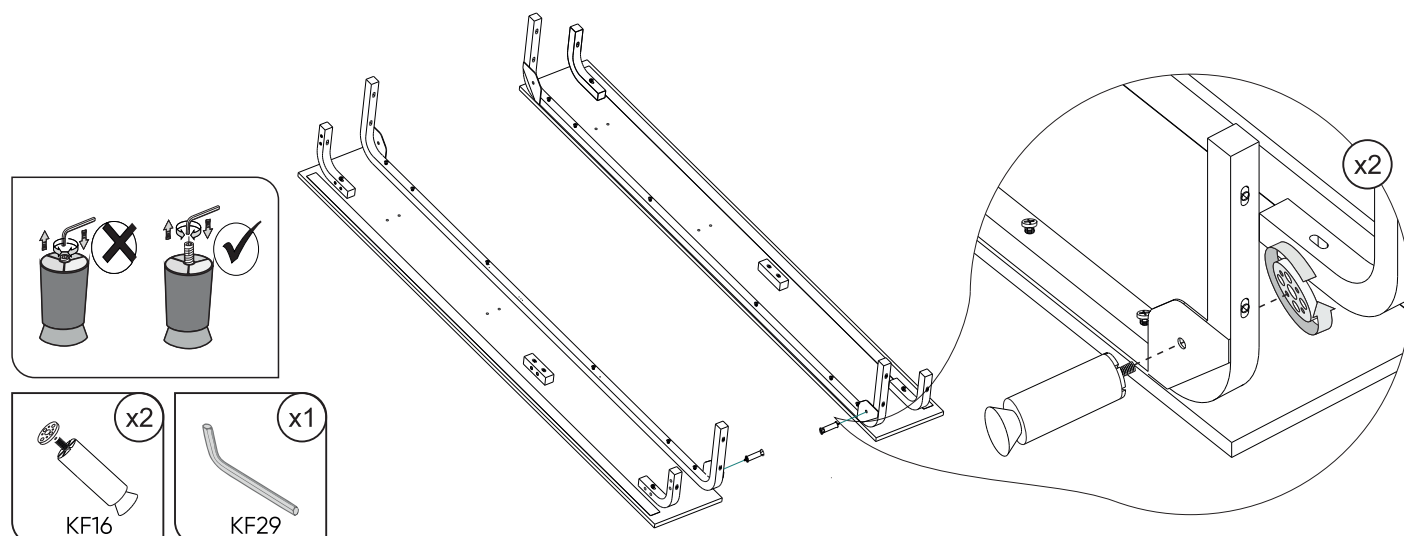


6)


Leg configuration option N°2 (h-150 chrome)

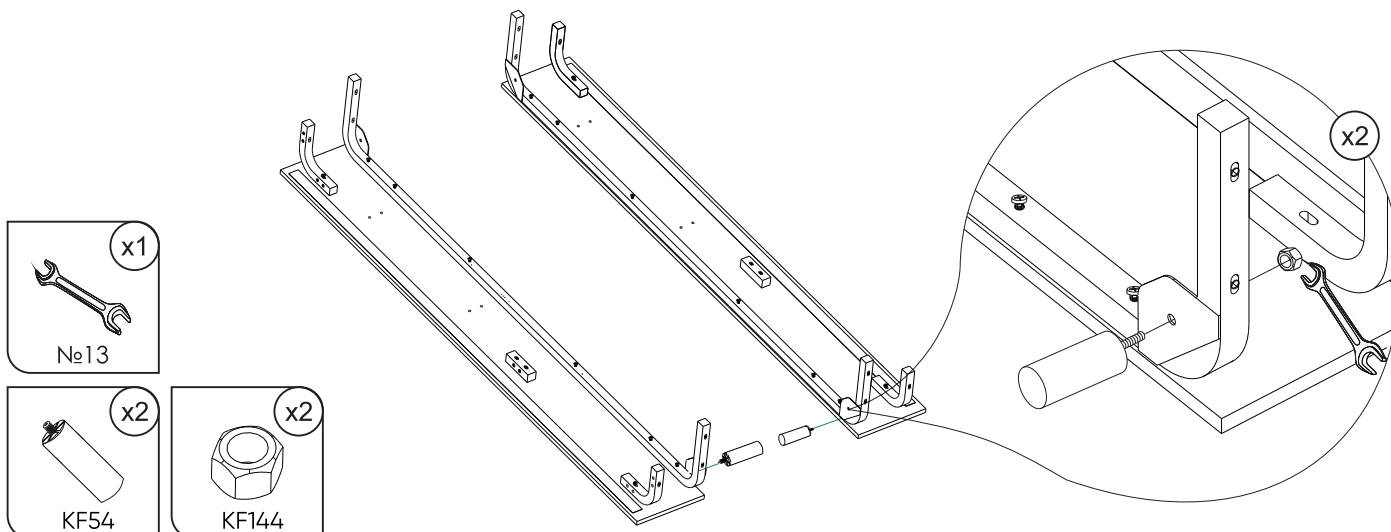


7) Leg configuration option №3 (h-97 corner)

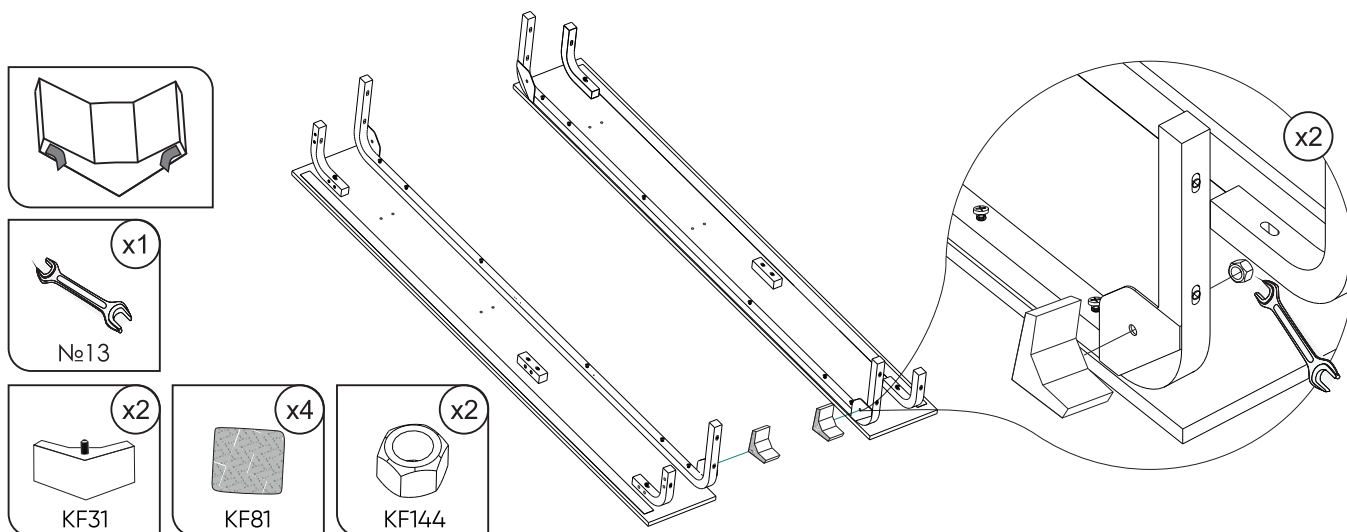

8) Leg configuration option №5 (h-130 chrome)

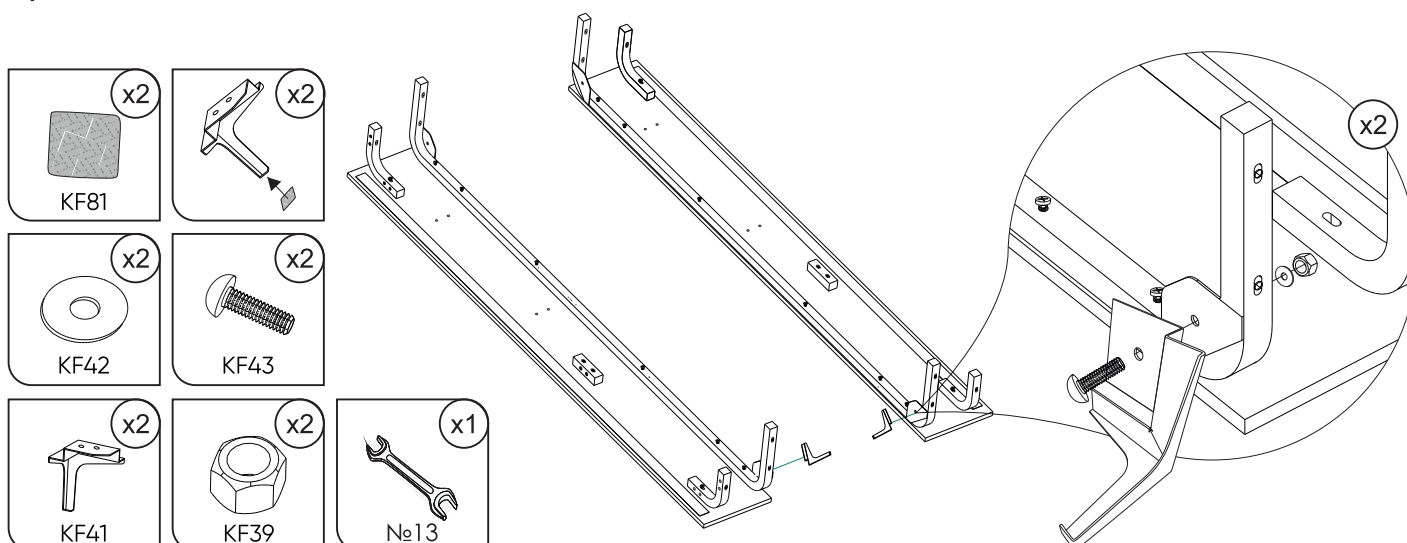


9) Leg configuration option №4 (h-60 venge)

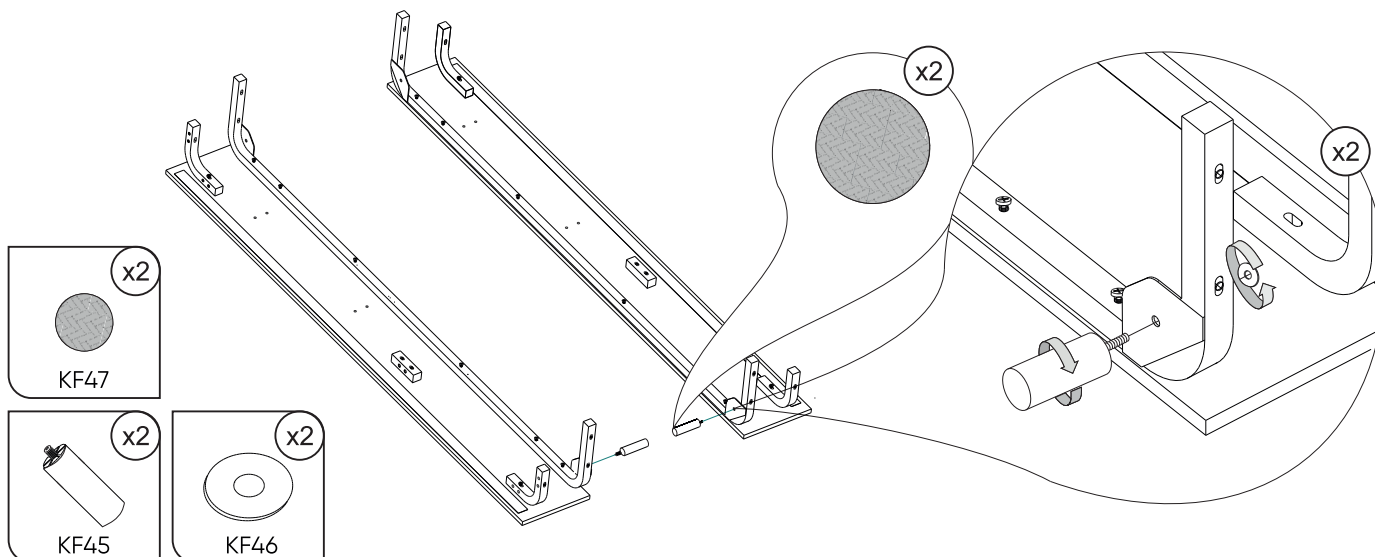


10)

Leg configuration option №6 (h-50)

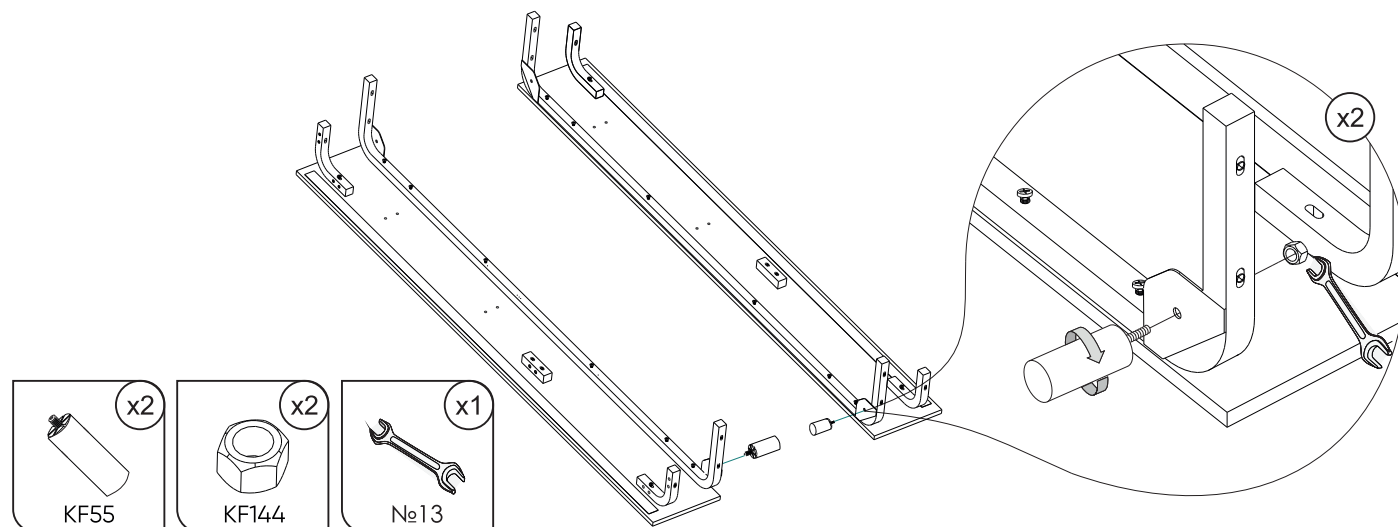


11)

Leg configuration option №7 (h-120 chrome)

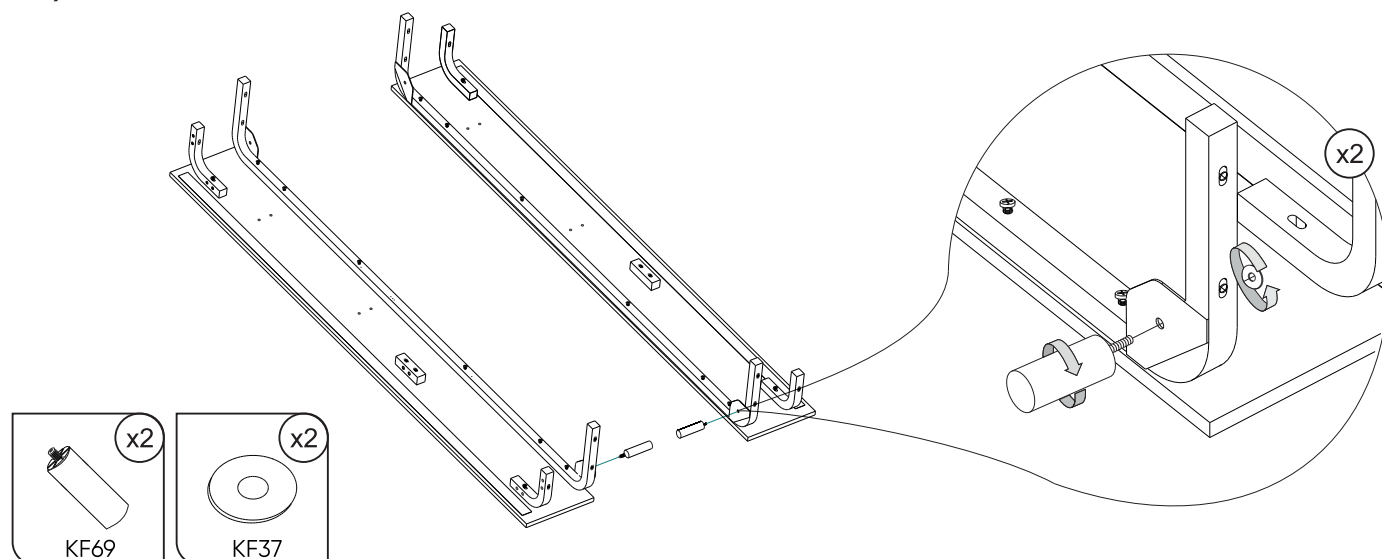



12)

Leg configuration option №8 (h-100 chrome)

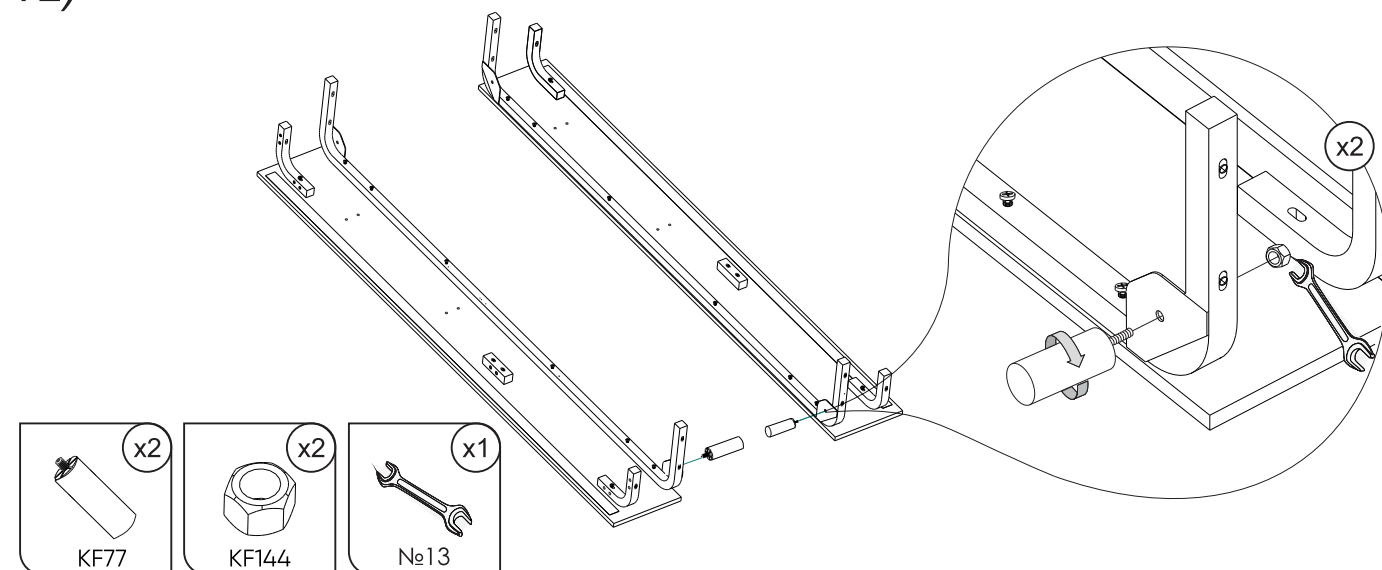



13)

Leg configuration option №9 (h-195)

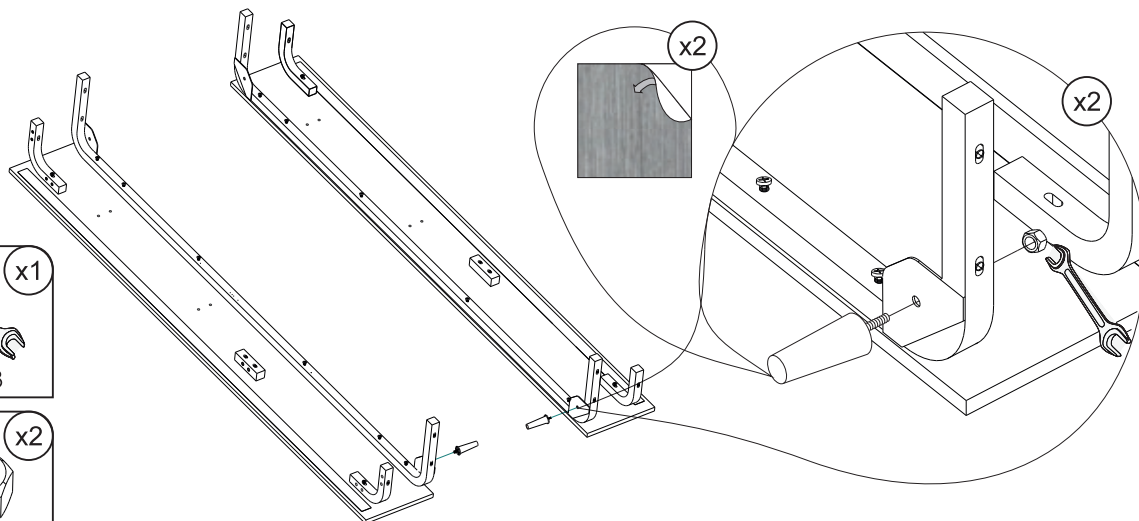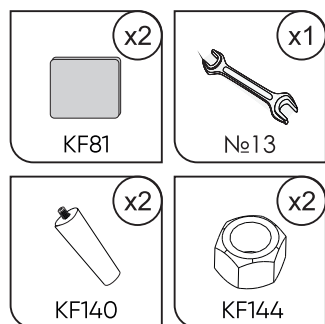


14)

Leg configuration option №10 (h-120)

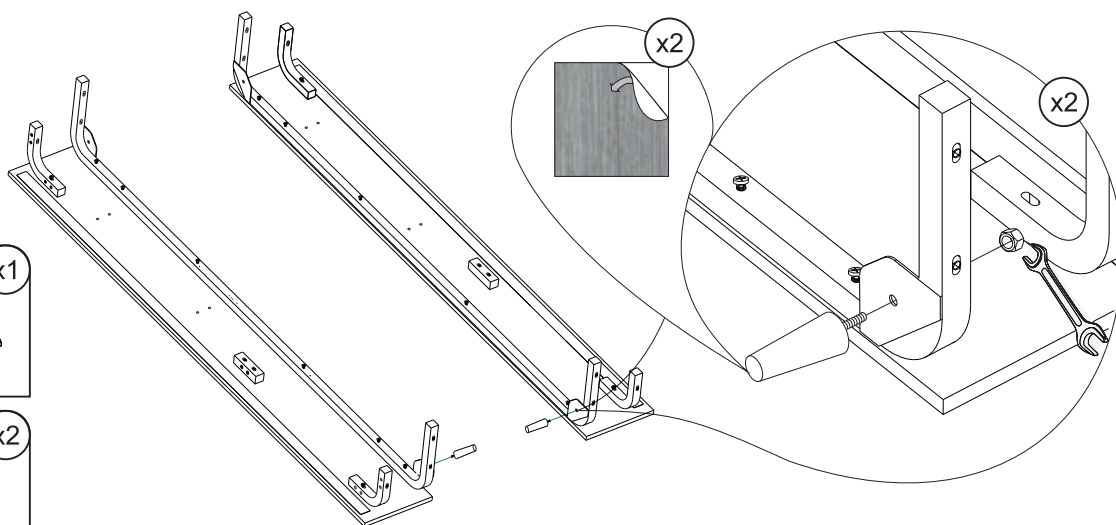
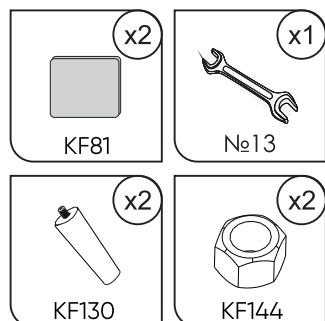


15)






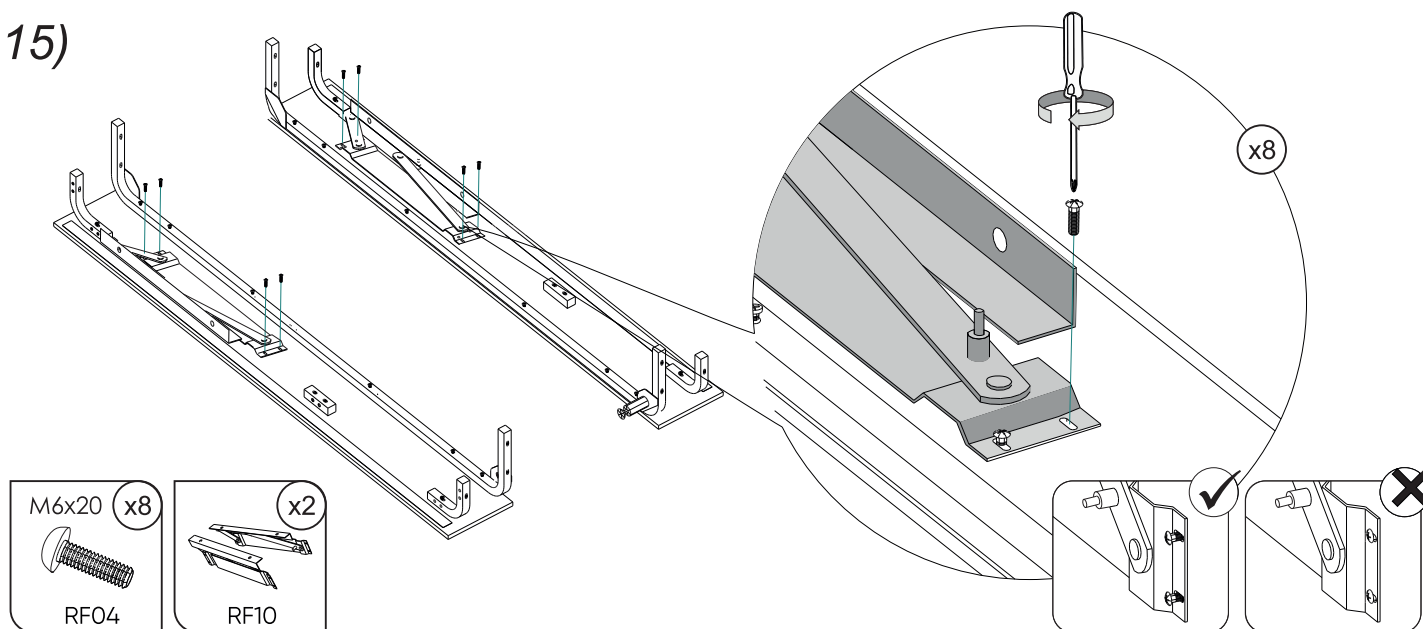


16)

Don't tighten

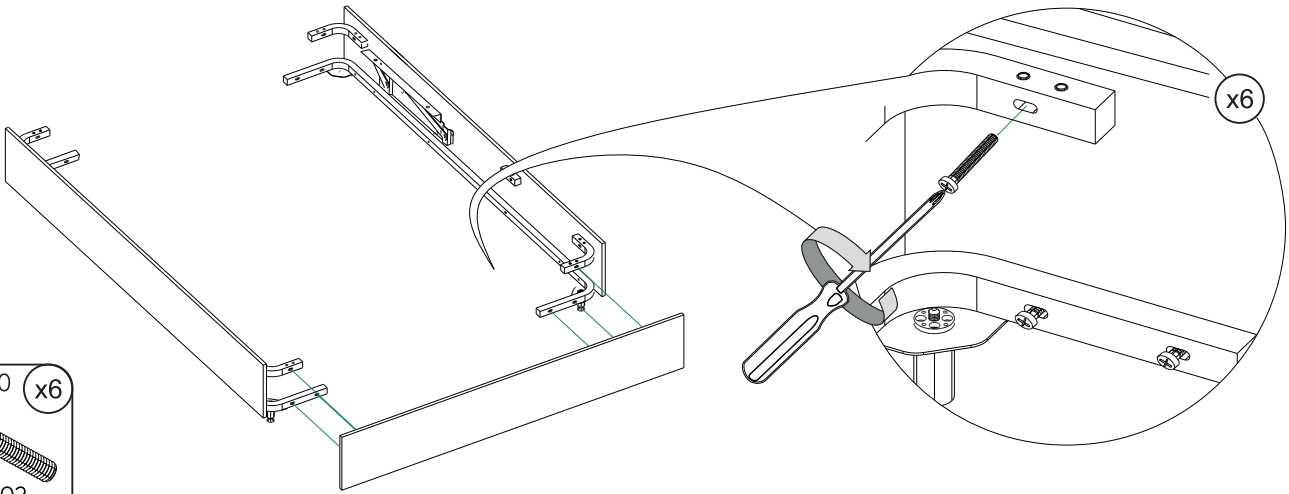
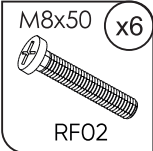


17) Only Naomi, Emma, Rosalie, Merlin, Premier beds can be fitted with the cover on the side-bar before the backrest is attached.

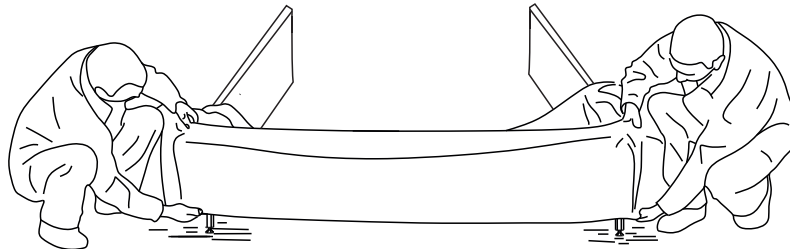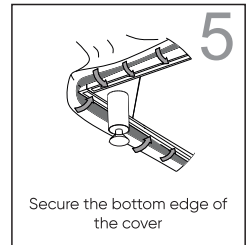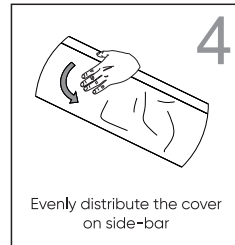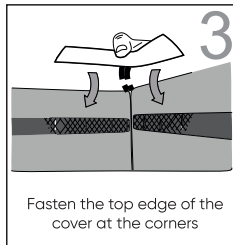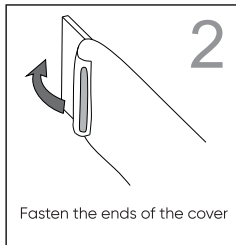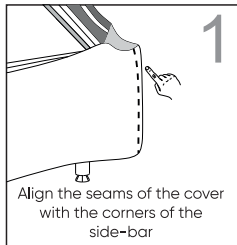


18)

Don't tighten

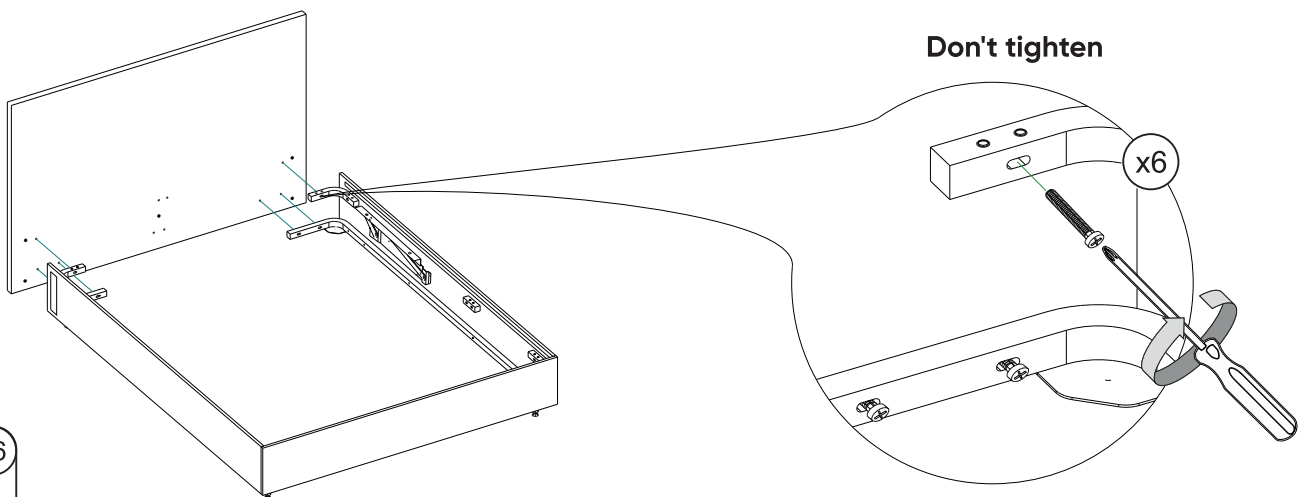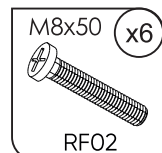


19)


For backrests with "ears"

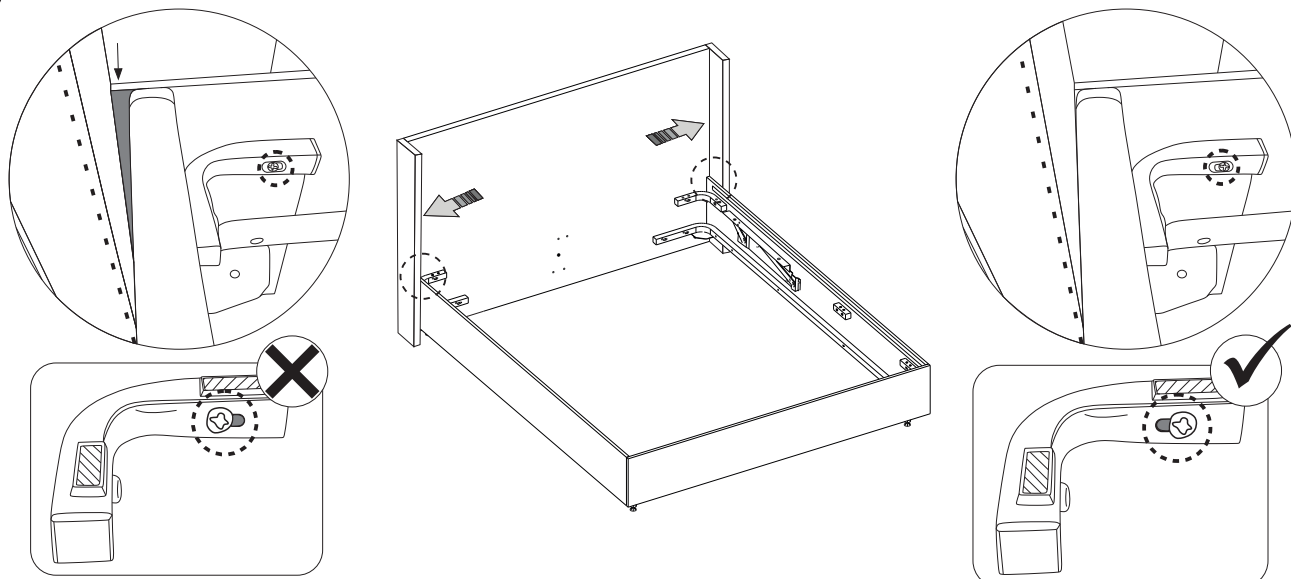




20)

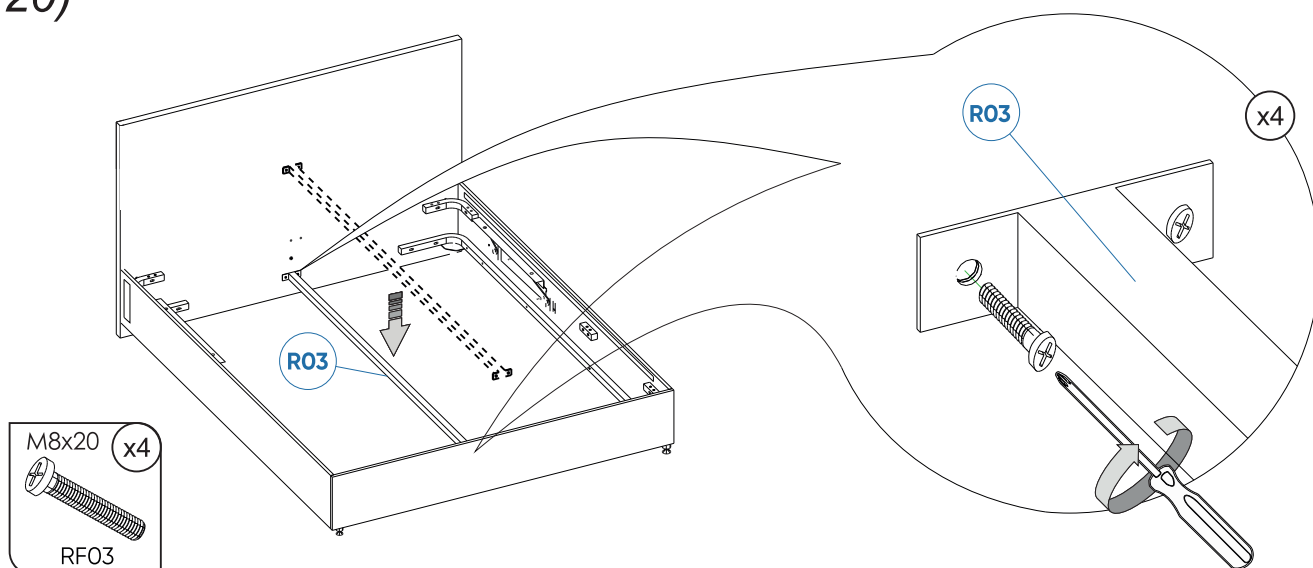





21)

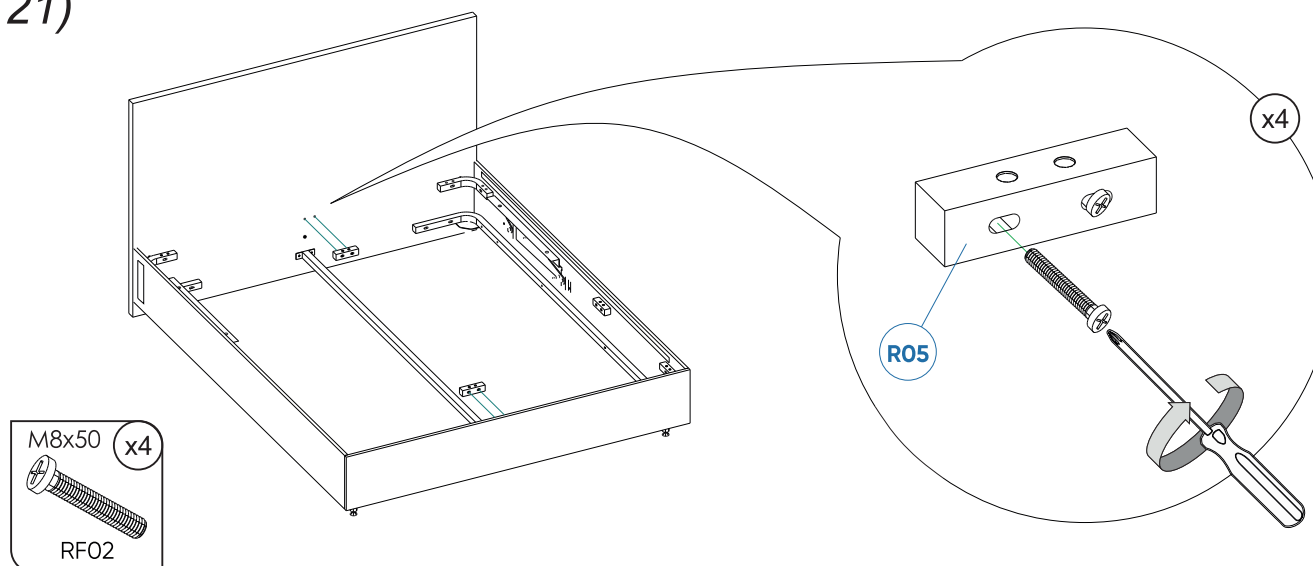





22)

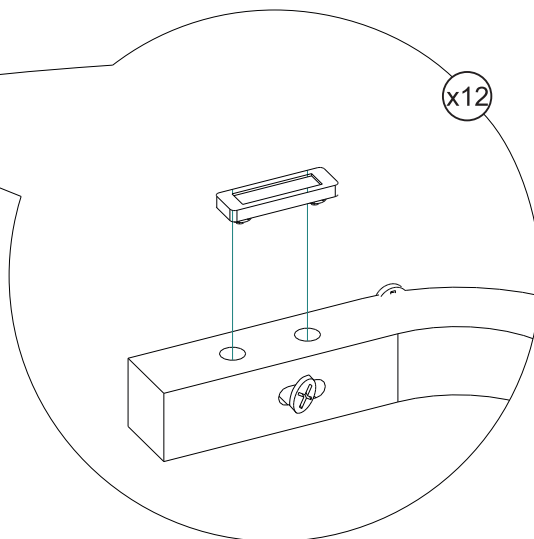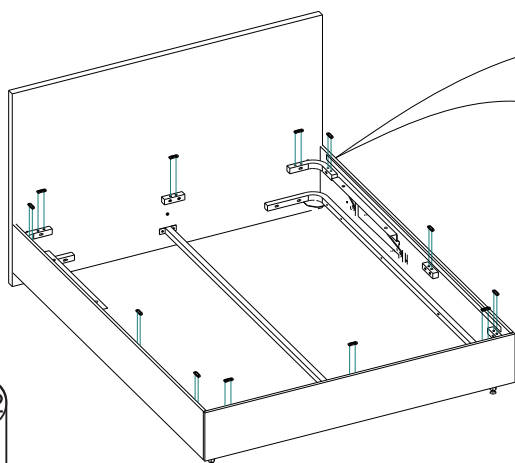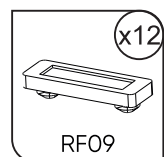

23)

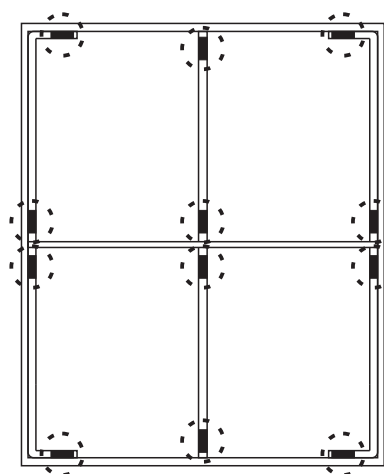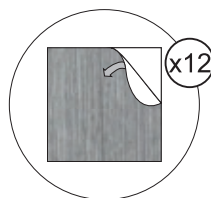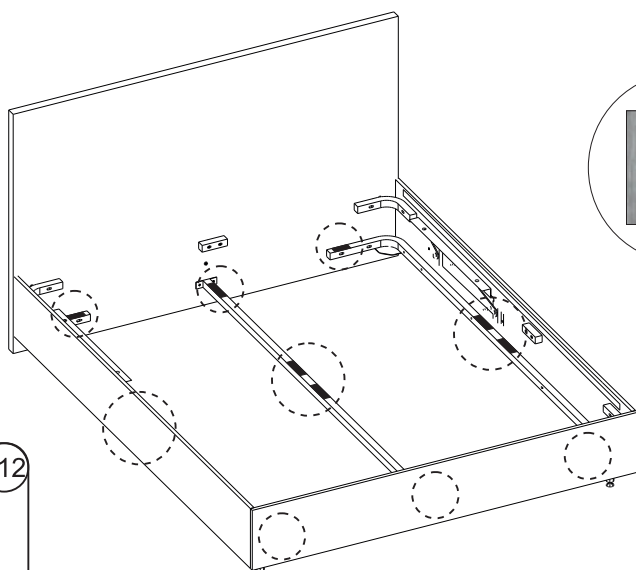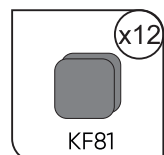


24)

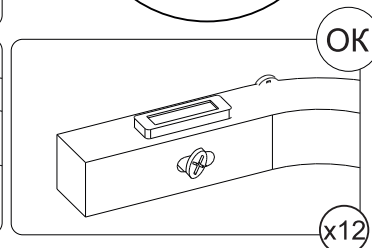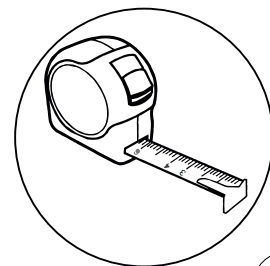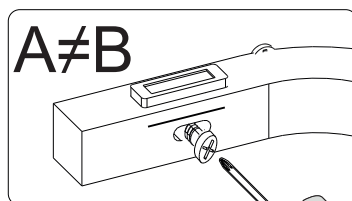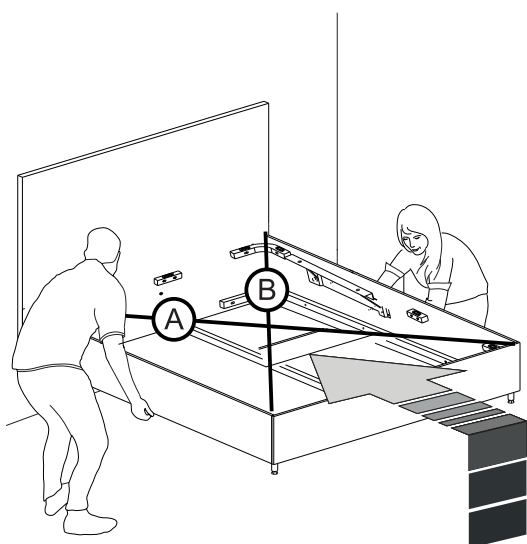


After adjusting the perimeter, tighten the screws


25)

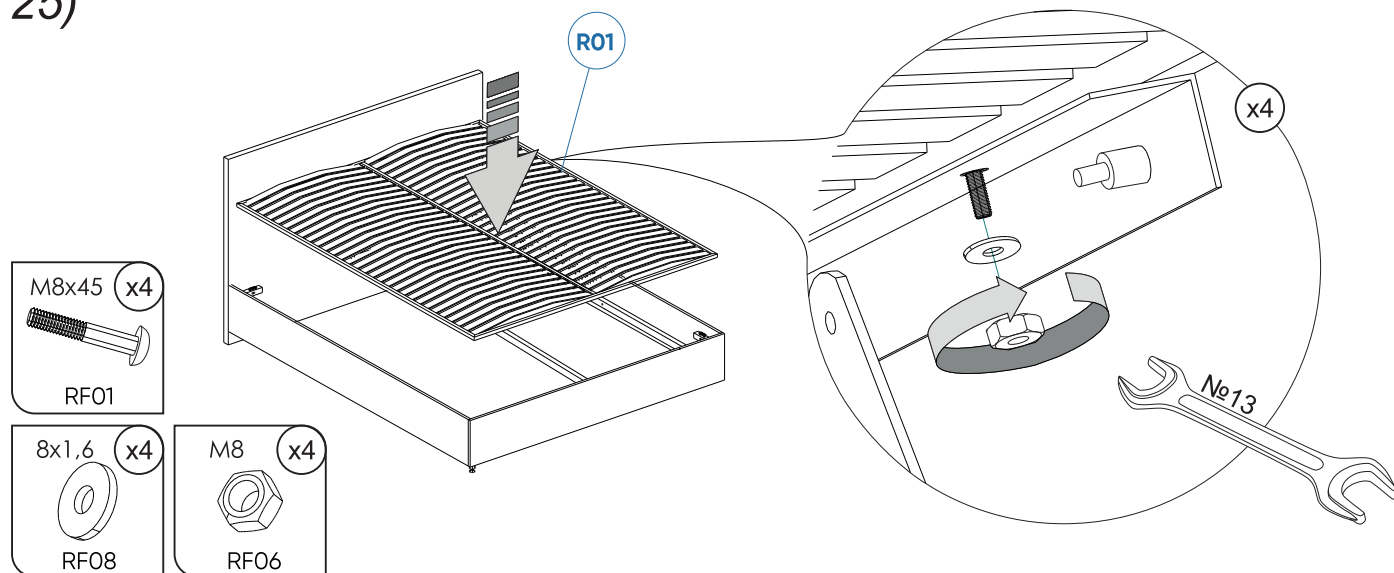

26)

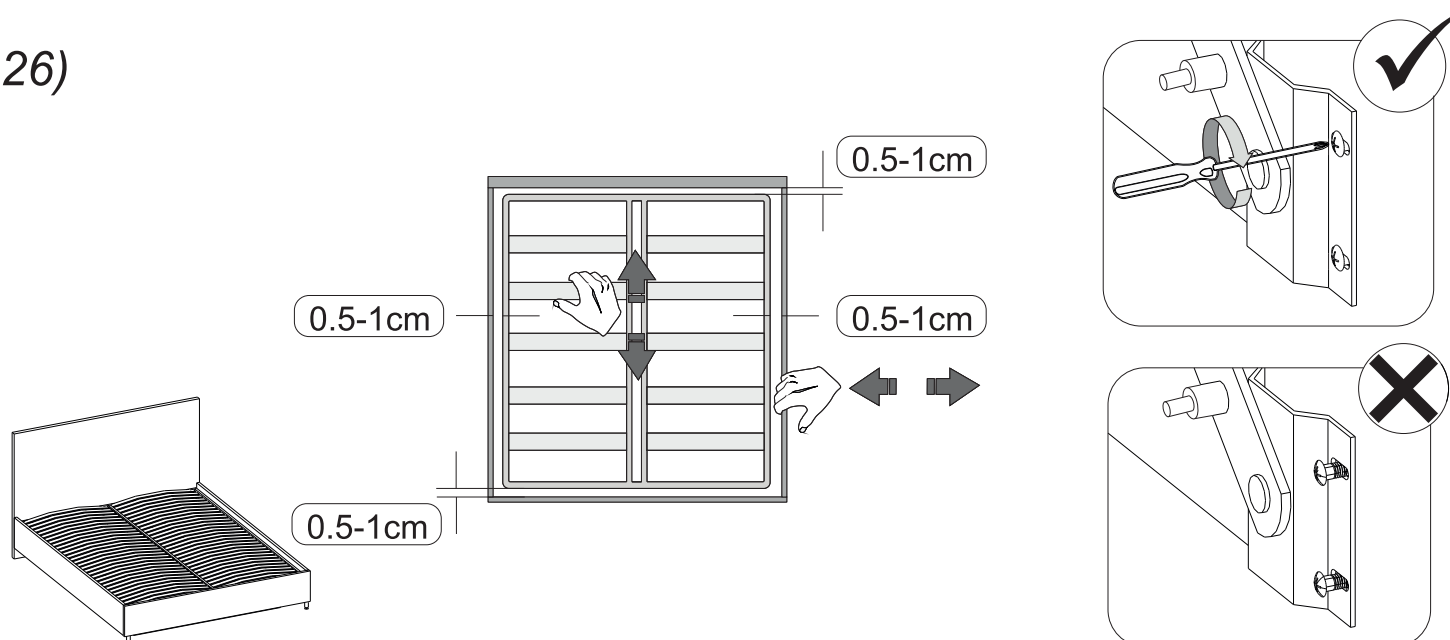





27)

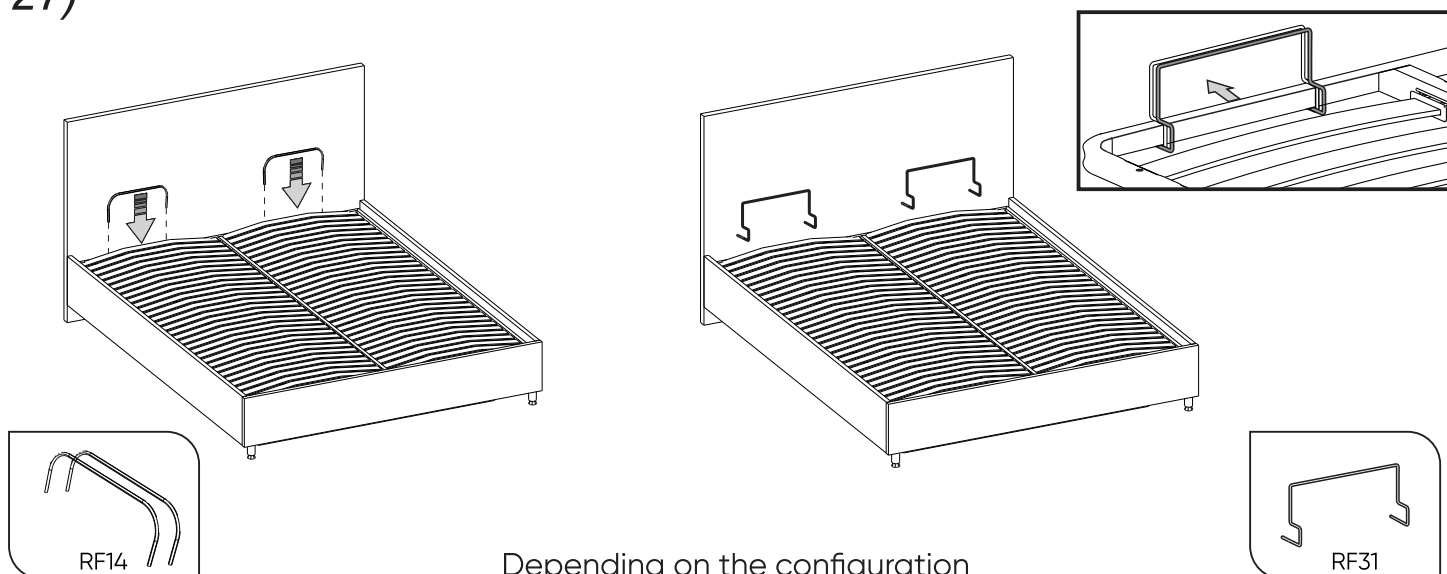

28)

The configuration and assembly sequence may vary depending on the modification of the lifting mechanism.

See the passport of the base

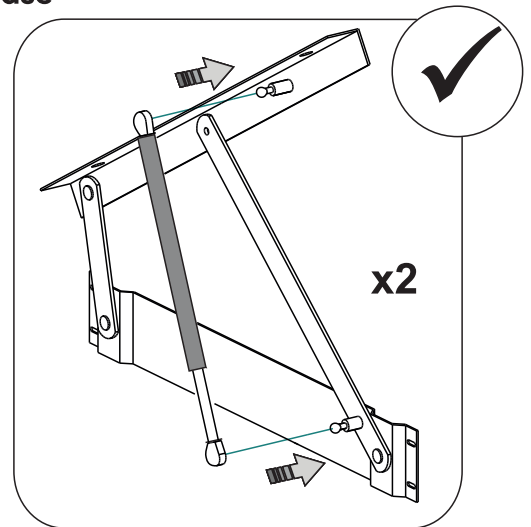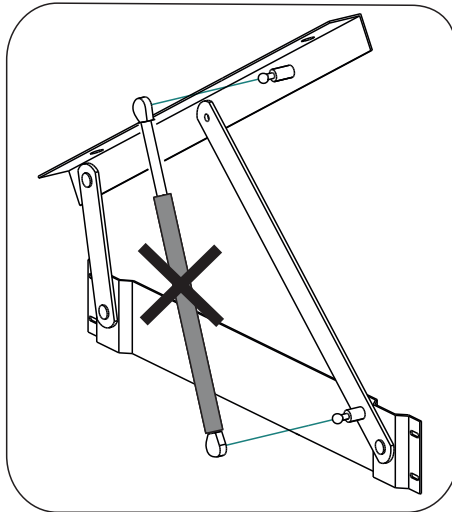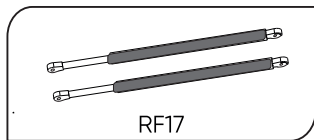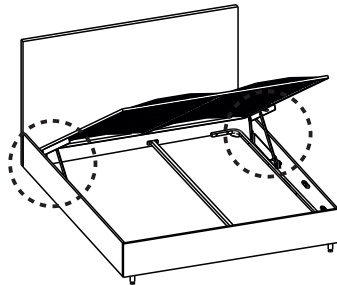

29)

Do not try to fold the gas lift before installing it on the product
Make sure that the gas lift is correctly installed (stem downwards)
Folding the gas lifts without a mattress on the frame is prohibited and injurious.
When folding the beds for the first time, in some cases a slight force is required. a small amount of force. Close the frame without fear of damaging the shock absorbers. the shock absorbers. If the frame does not close with two gas lifts installed, it may be due to the insufficient weight of the mattress purchased.

Recommended:


1. Remove one of the gas lifts. Lower the bed frame with the mattress on it mattress.
2. Carry out the same procedure with the second face lift
3. Place both gas lifts on the lifting mechanism and lower the frame. This will eliminate the hassle of folding the bed



30)

The configuration and assembly sequence may vary depending on the modification of the lifting mechanism.


See the passport of the base

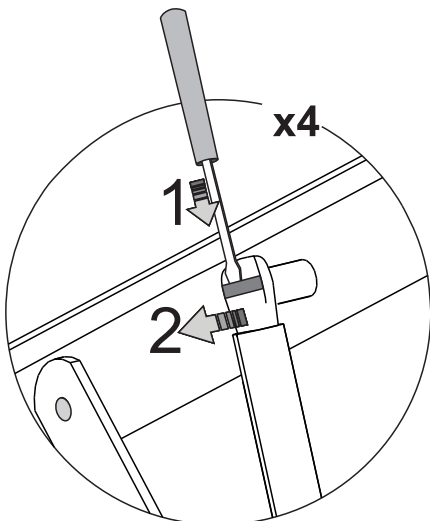


Для снятия газового амортизатора:

1. slide a flat screwdriver under the metal fastening stables;
2. lift the stables upwards;
3. remove the shock absorber mount from the pin;
4. repeat on the underside.



31)

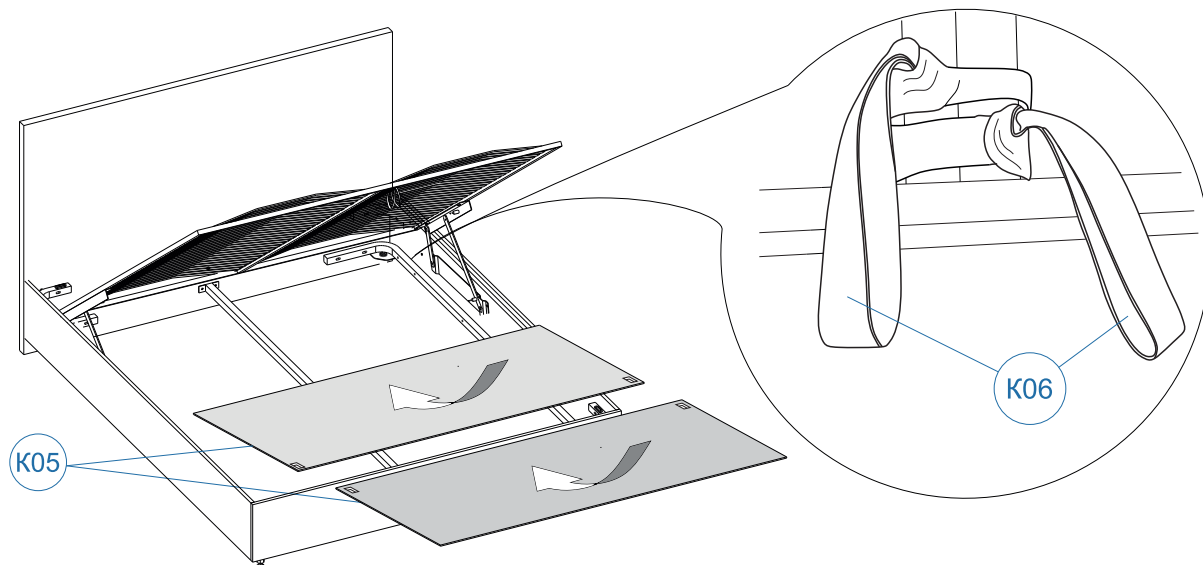



32) **Only for beds with removable cover and side-bar fully upholstered technical fabrics.**

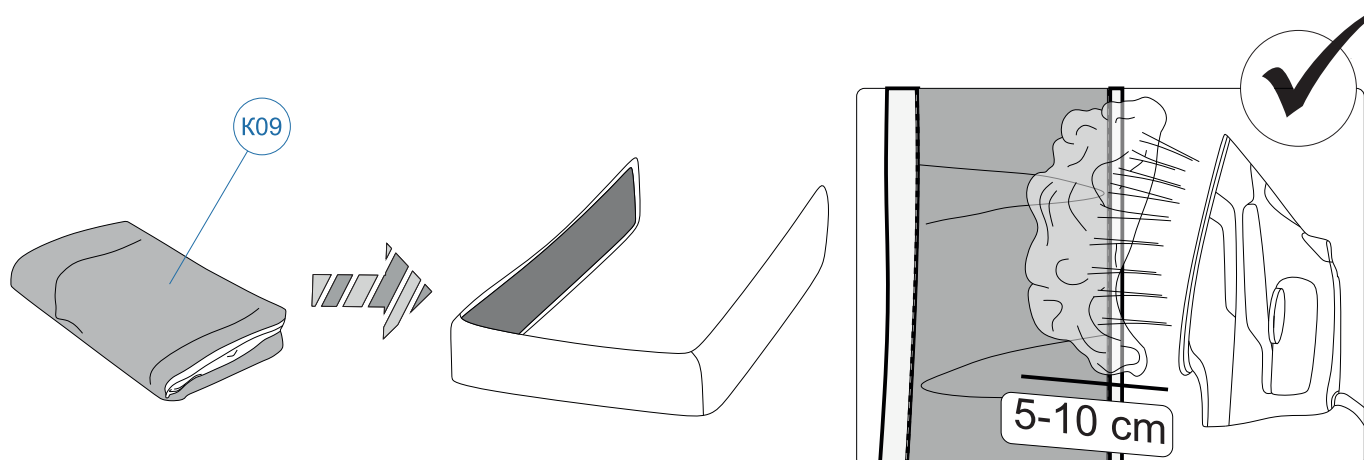

33) **Only Naomi, Emma, Rosalie, Merlin, Premier beds can be fitted with the cover on the side-bar before the backrest is attached.**

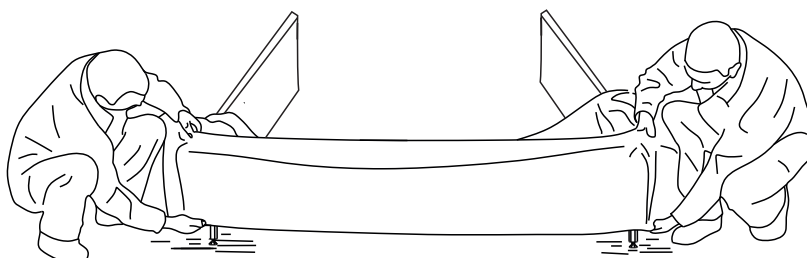
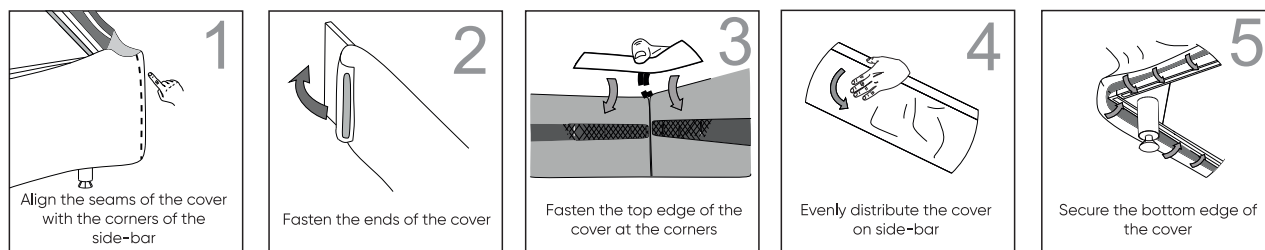


34)

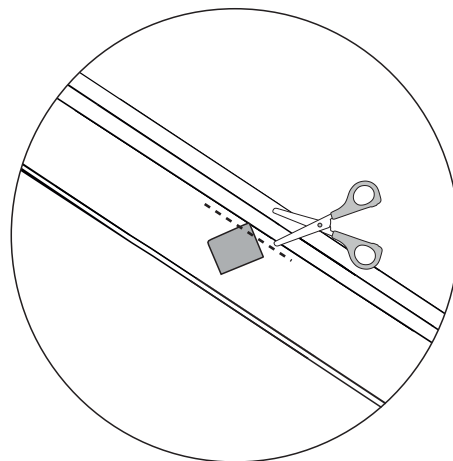
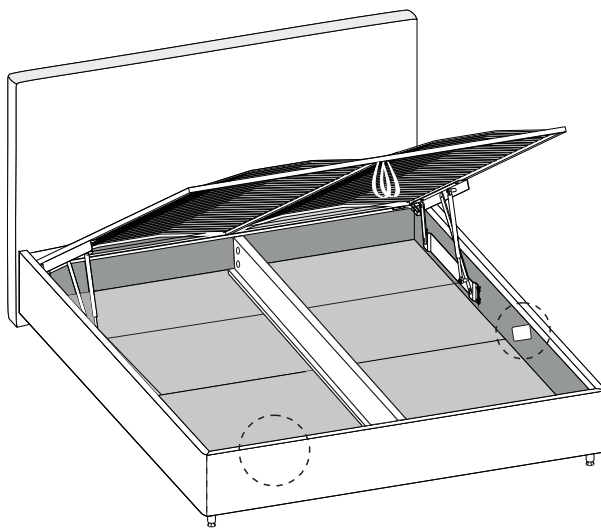


If necessary, the sample material can be cut or tucked under a removable cover




35)

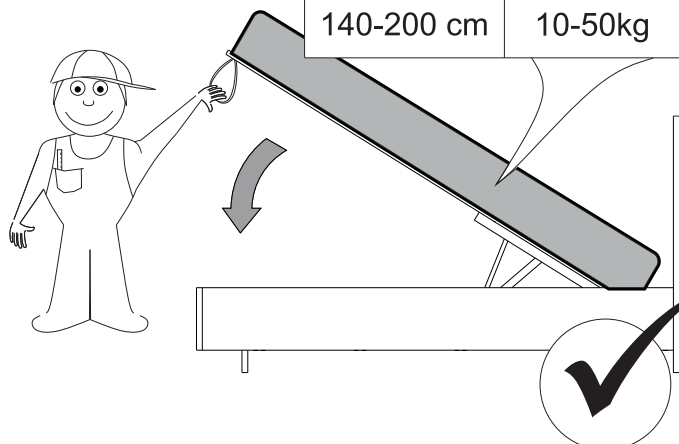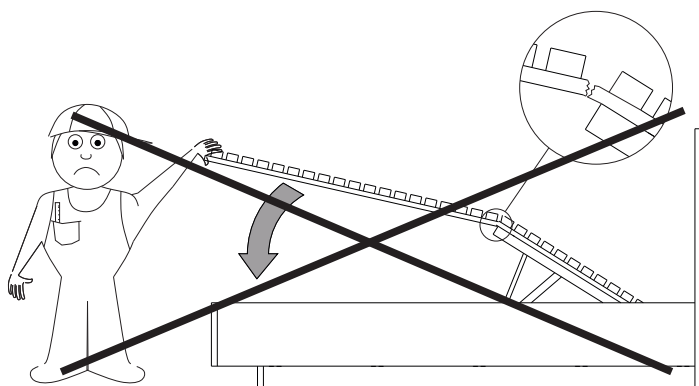




36)

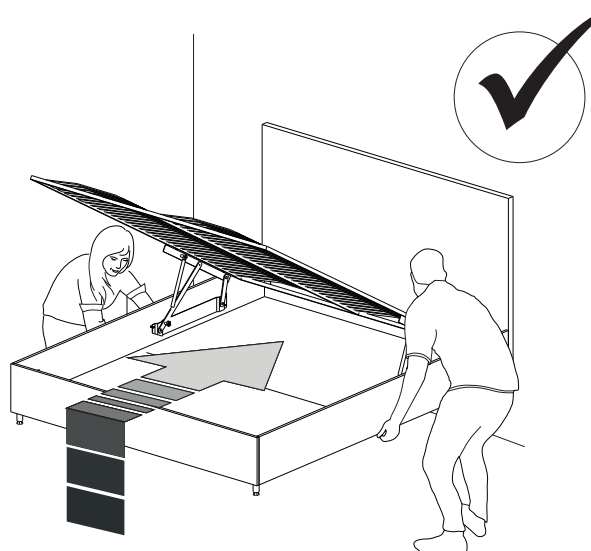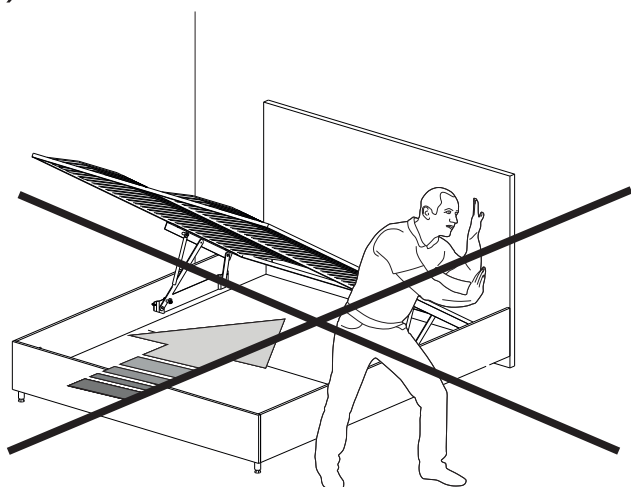


37)

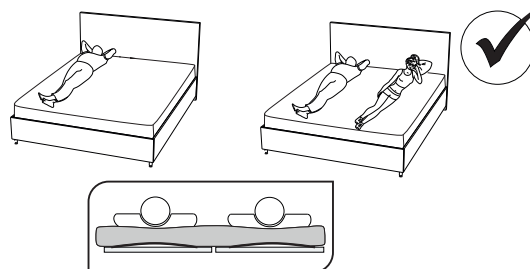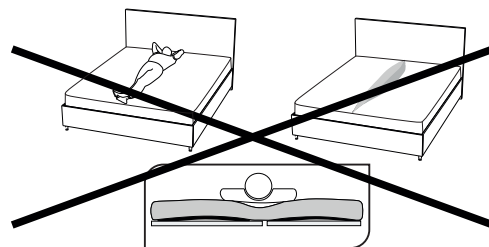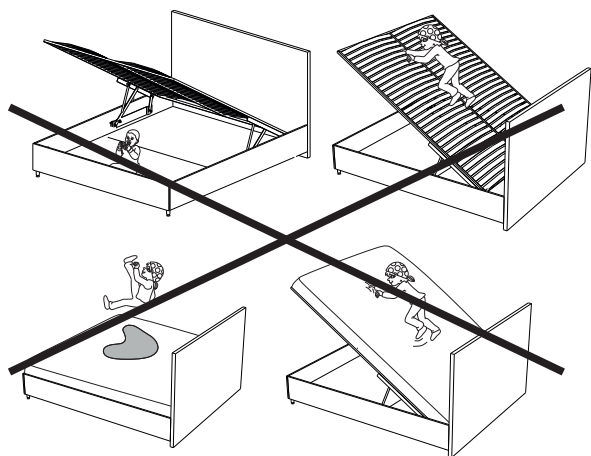

38)

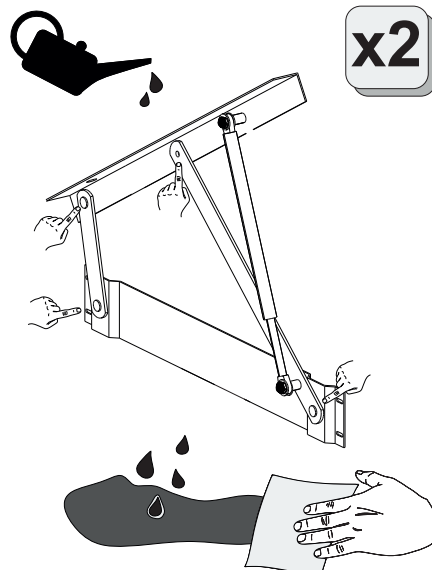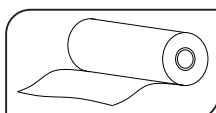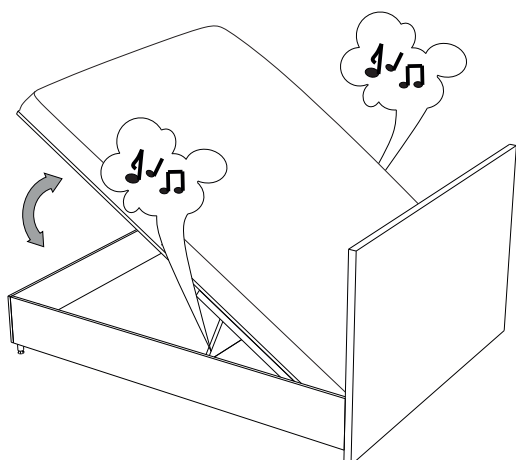

39)

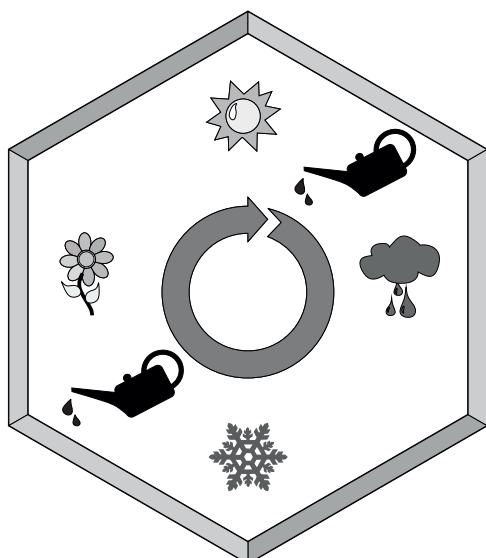

Lubrication should be carried out
of the rubbing parts of the mechanism
at least twice a year